


This guide does not cover all aspects of installation. Ask your representative if your detail is different. Panel Caps or Zee Closures can often be used interchangeably, and may make installation easier even if not shown in the illustration.

Content	Page
Overview .....	1
Soffit / Ceiling - Overhang .....	2-3
Soffit / Ceiling - Joint .....	4-5
Soffit / Ceiling - Narrow Angle .....	6
Soffit / Ceiling - Inside Ridge .....	7
Wall - Inside Corner .....	8
Wall - Outside Corner .....	9
Wall - Windows and Doors .....	10
Wall - Bottom of Wall .....	11-12

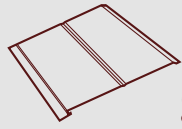


**Ultra®**  
Steel Soffit

## Soffit / Ceiling | Overhang - Option 1

- 1) Install J-Channel using Pancake Screws.
- 2) Install Soffit Panels, either horizontally or vertically, tucking them inside the J-Channel.
- 3) Install Fascia Trim over end, capping the end of the shingles and going up the fascia, and fastening with Wood Screws.

### Color Guide

	Panel
	J-Channel
	Fascia (sizes vary)
	Pancake Screw
	Wood Screw


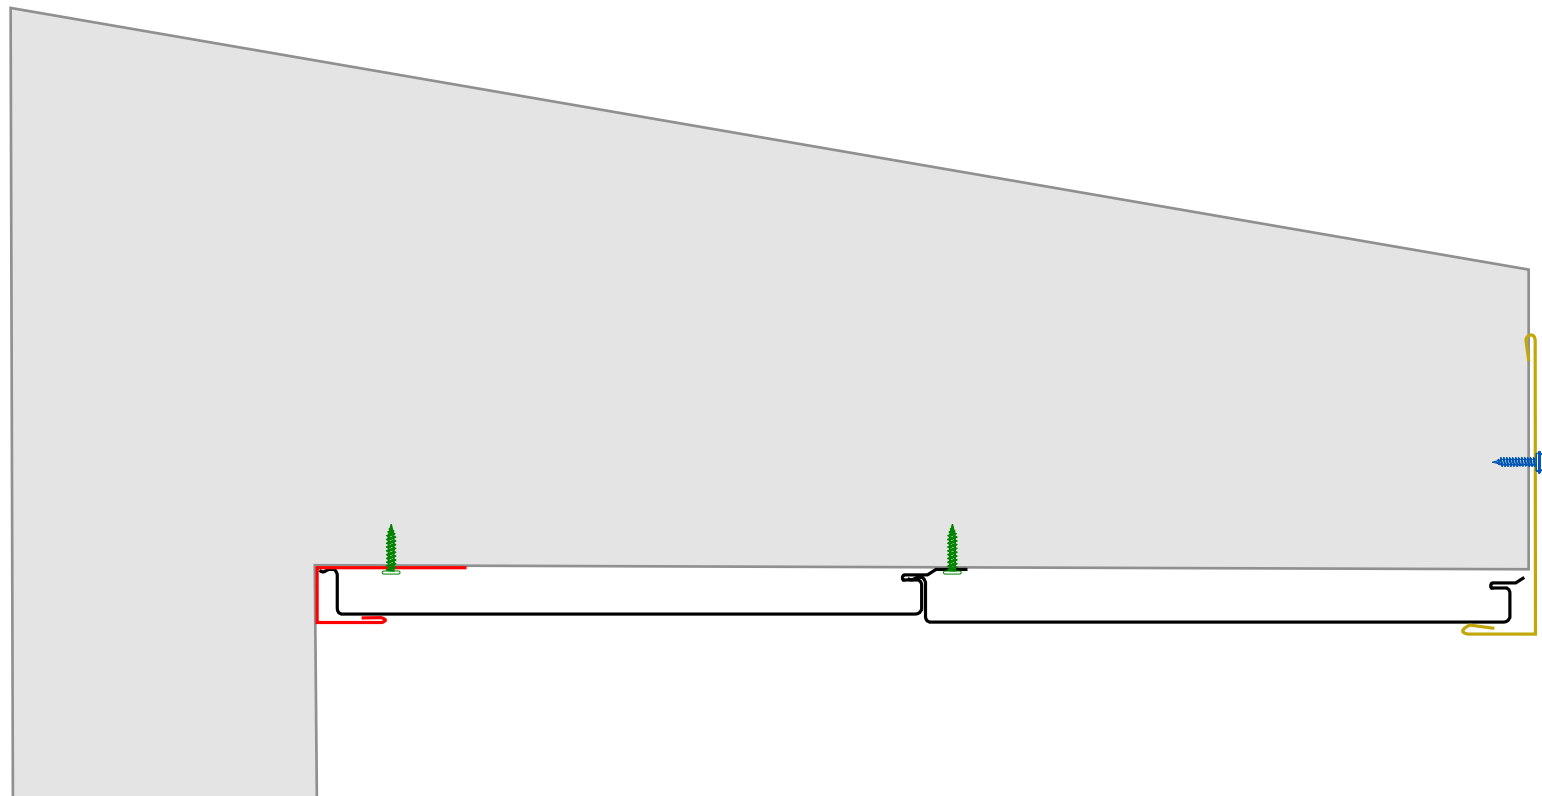





## Soffit / Ceiling | Overhang - Option 2

- 1) Install J-Channel on both sides using Pancake Screws.
- 2) Install Soffit Panels, either horizontally or vertically, tucking them inside the J-Channel. On the fascia side, pop rivets may be used to hold them tight to the j-channel if needed.

## Color Guide

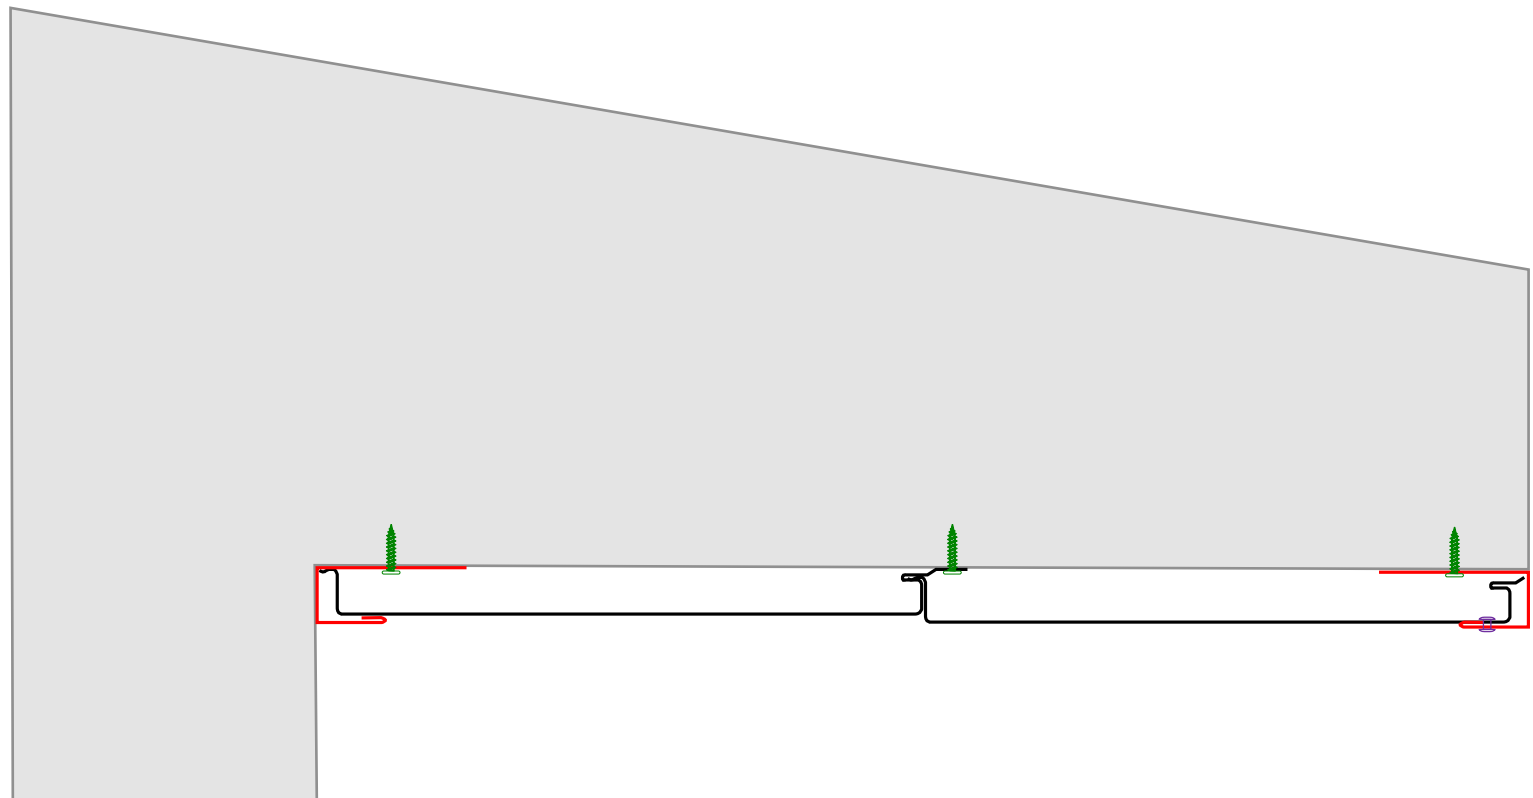
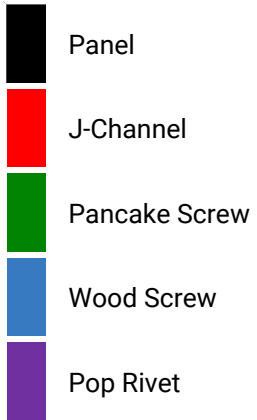


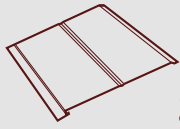

## Soffit / Ceiling | Joint - Option 1

- 1) Install J-Channel, butted together, and fastened using Pancake Screws.
- 2) Install Soffit Panels, either horizontally or vertically, tucking them inside the J-Channel. Pop rivets may be used to hold them tight to the j-channel if needed.

## Color Guide

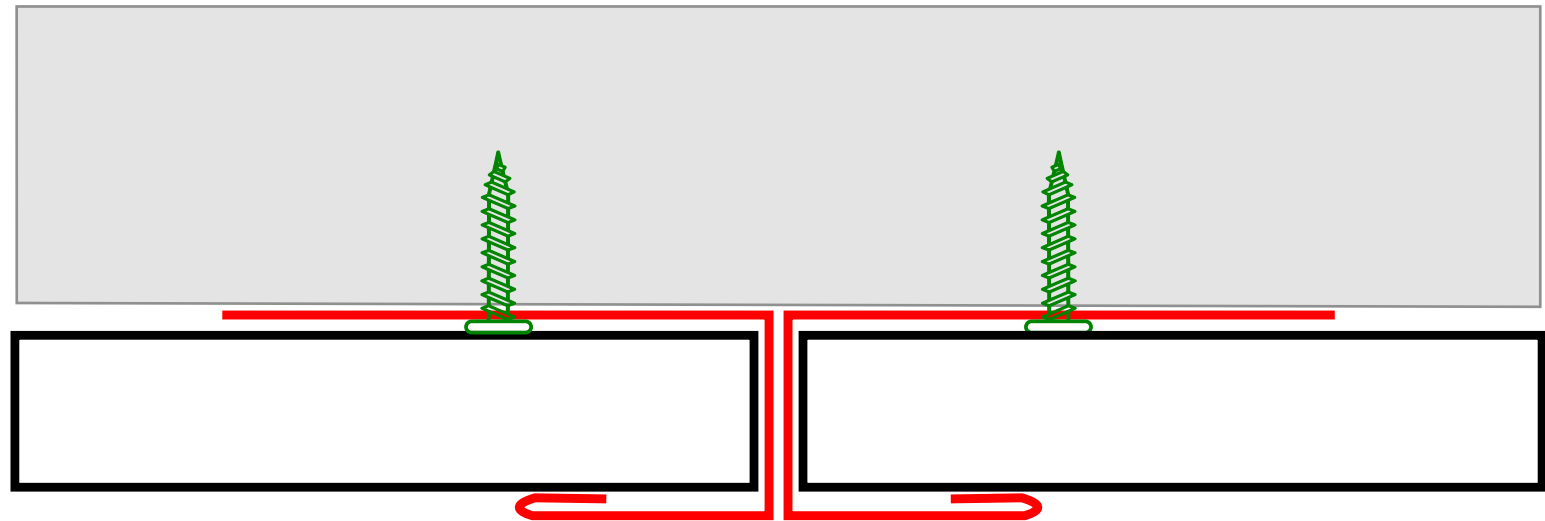
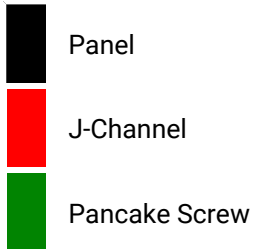





## Soffit / Ceiling | Joint - Option 2

- 1) Install Soffit Panels, either horizontally or vertically.
- 2) Install Custom Joint Trim, fastening with Pop Rivets.

## Color Guide

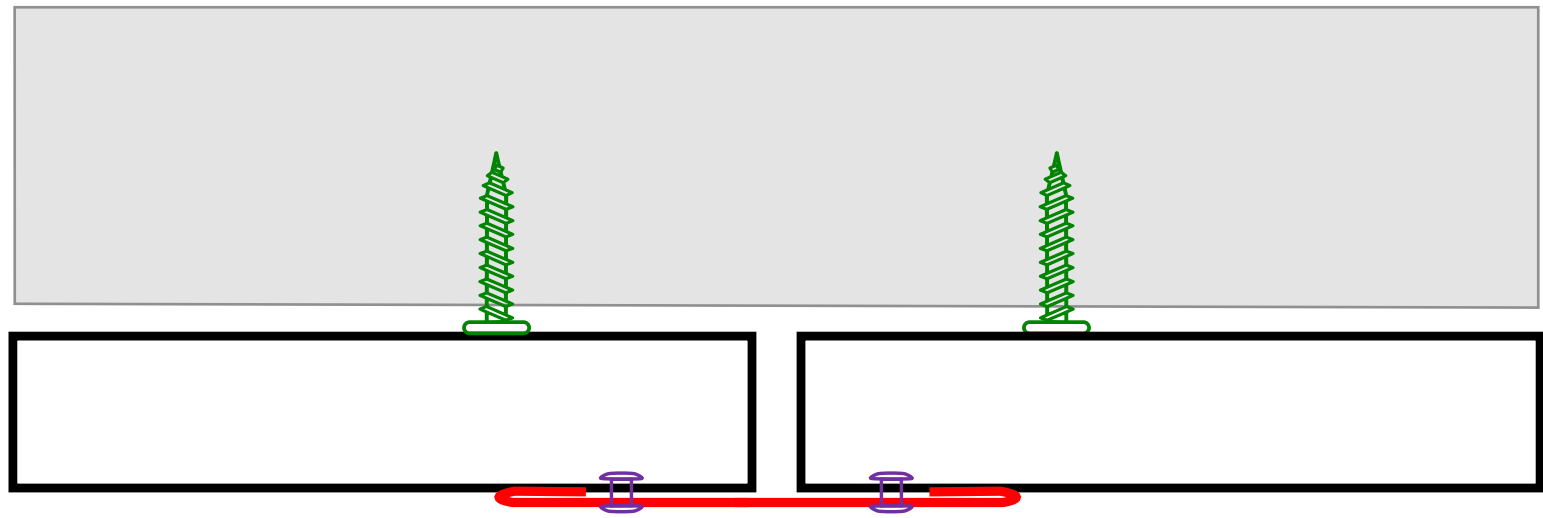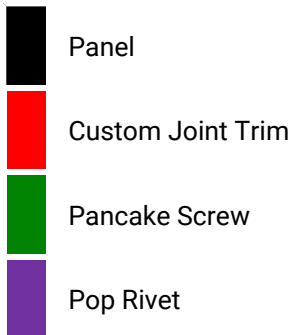

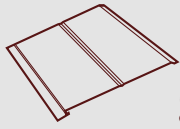



**Ultra®**  
**Steel Soffit**

## Soffit / Ceiling | Narrow Angle

- 1) Install J-Channel using Pancake Screws.
- 2) Install Soffit Panels, either horizontally or vertically, tucking them inside the J-Channel, and fastening them with Pancake Screws.
- 3) Install Soffit Narrow Angle over end, capping the end of the shingles and going up the fascia, and fastening with Wood Screws.

### Color Guide


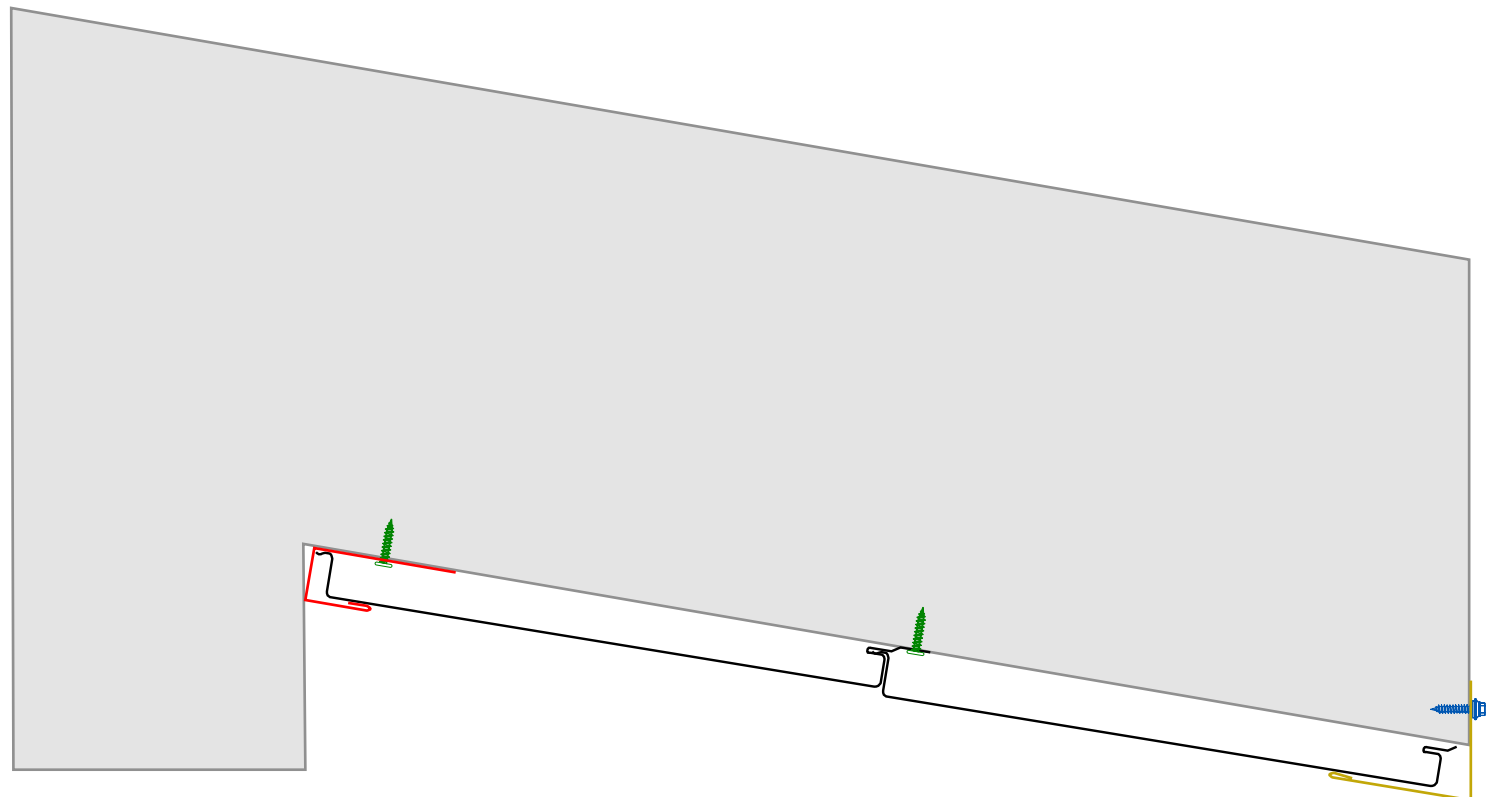


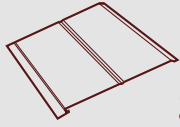


## Soffit / Ceiling | Inside Ridge Cap

- 1) Optionally install Panel Caps on each side of inside ridge using Pancake Screws.
- 2) Install Soffit Panels, either horizontally or vertically, tucking them inside the Panel Caps (if used), and fastening them with Pancake Screws.
- 3) Install Inside Ridge Cap over panels and fasten with pop rivets.

### Color Guide

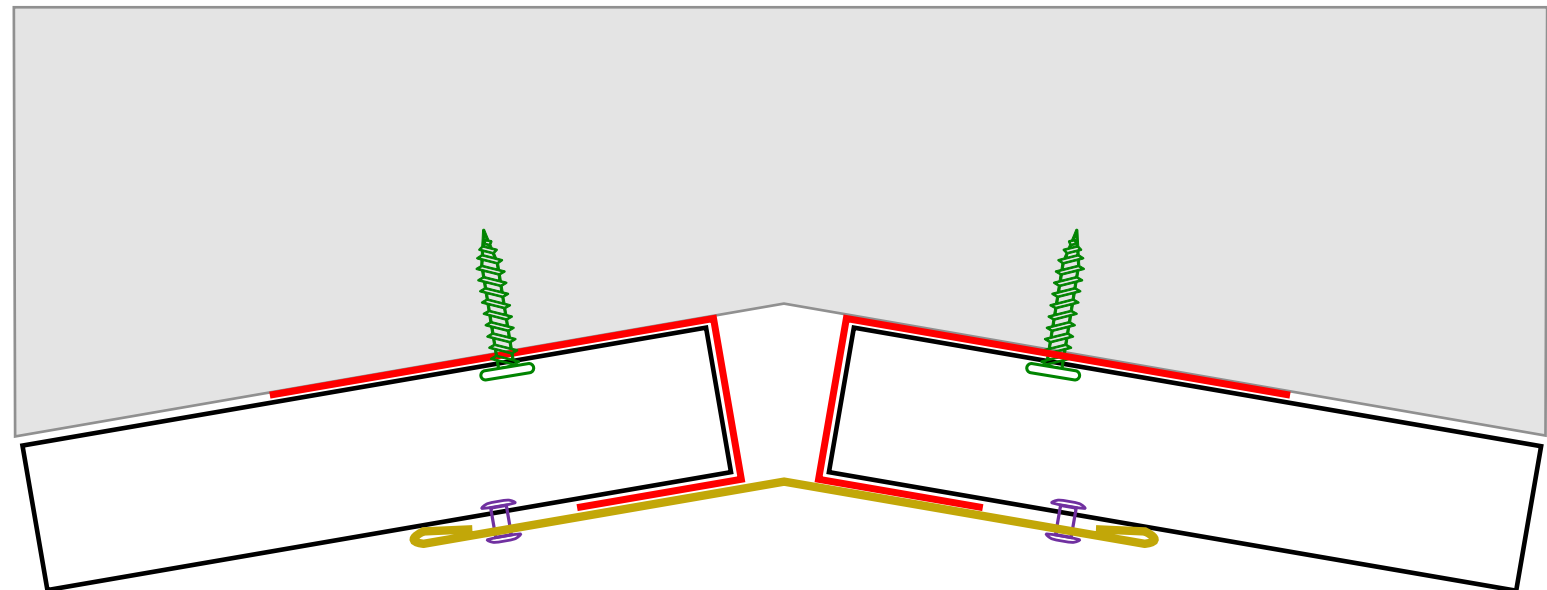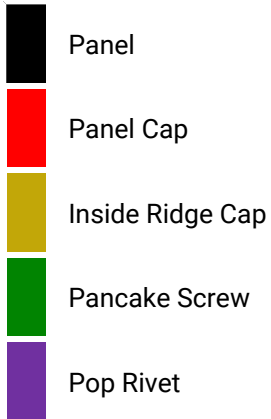

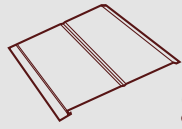




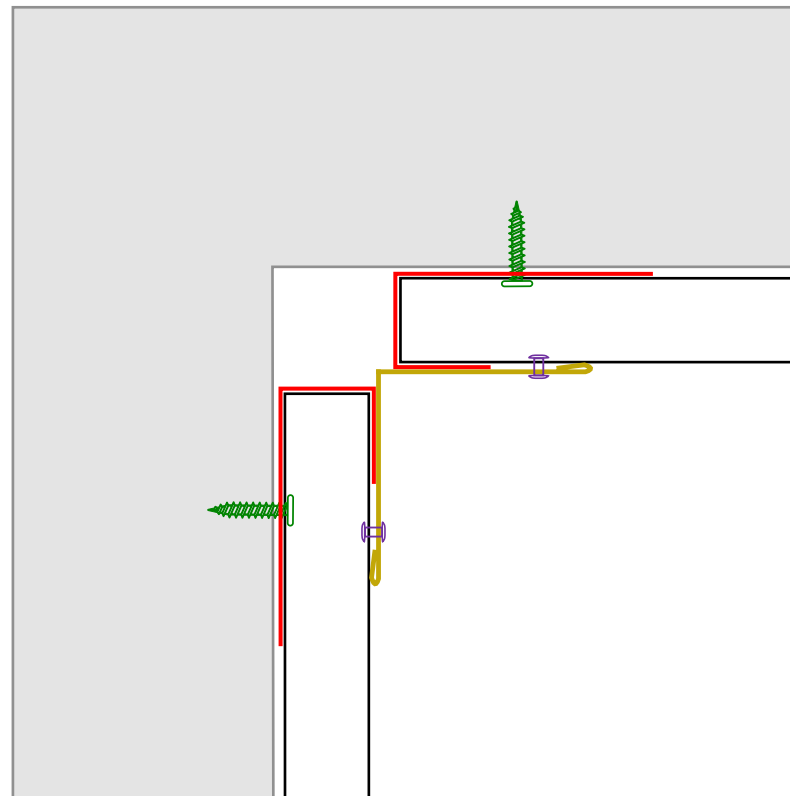


## Wall | Inside Corner

- 1) Optionally install Panel Caps on each side of inside corner using Pancake Screws.
- 2) Install Soffit Panels, either horizontally or vertically, tucking them inside the Panel Caps (if used), and fastening them with Pancake Screws.
- 3) Install Inside Corner over panels and fasten with pop rivets.

## Color Guide

	Panel
	Panel Cap
	Inside Corner
	Pancake Screw
	Pop Rivet









## Wall | Outside Corner

- 1) Optionally install Panel Caps on each side of outside corner.
- 2) Install Soffit Panels, either horizontally or vertically, tucking them inside the Panel Caps (if used), and fastening them with Pancake Screws.
- 3) Install Outside Corner over panels and fasten with pop rivets.

## Color Guide

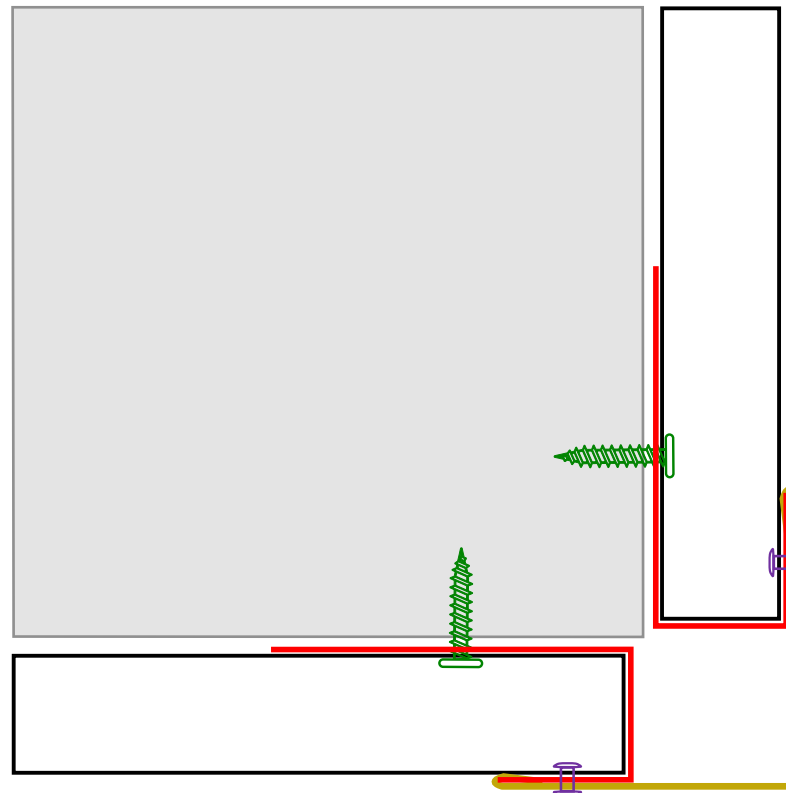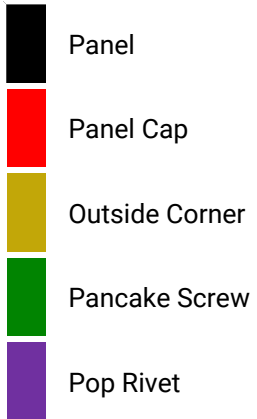


Wall | Windows and Doors

- 1) For bottom and sides of window (or sides of door) install J-Trim against window or door using Pancake Screws.
- 2) For top of window, install Soffit Base Trim (or Base Trim).
- 3) Install Soffit Panels around window or door, tucking them into the J-Trim at the sides and bottom, and butting them against the top of the Soffit Base Trim (or Base Trim) above the window or door

Color Guide

-  Panel
-  J-Trim
-  Soffit Base Trim
-  Pancake Screw
-  Wood Screw


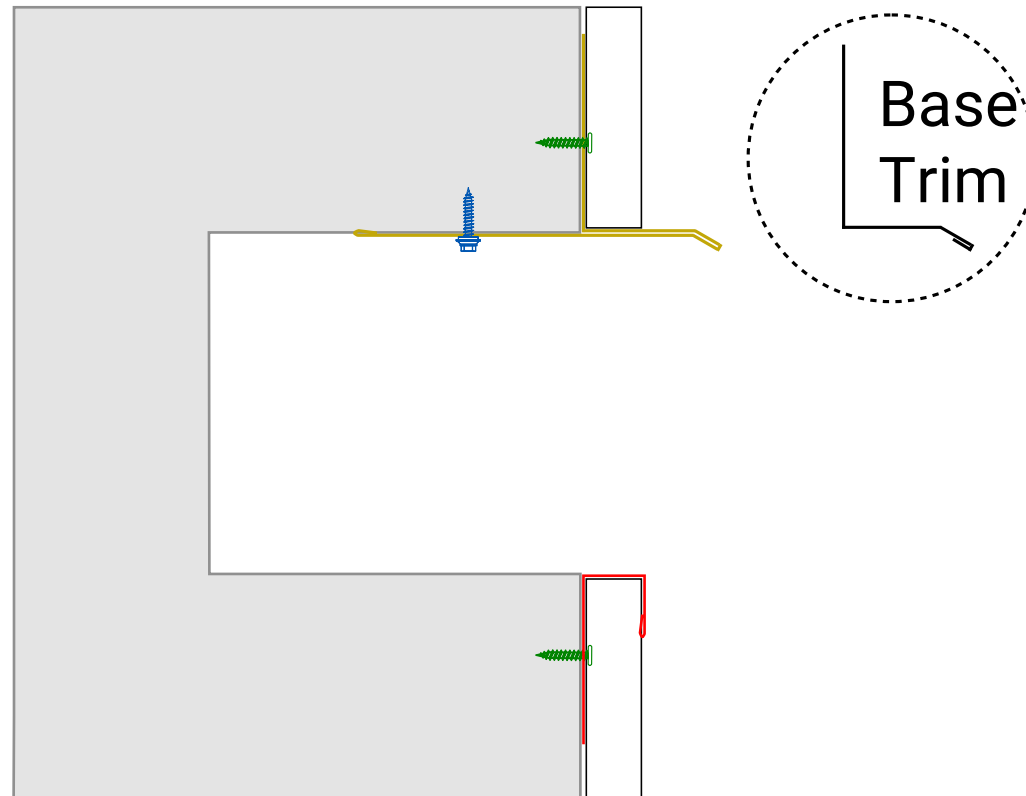





## Wall | Bottom of Wall - Option 1

- 1) Install Base Trim using Pancake Screws.
- 2) Install Soffit Panels.

## Color Guide

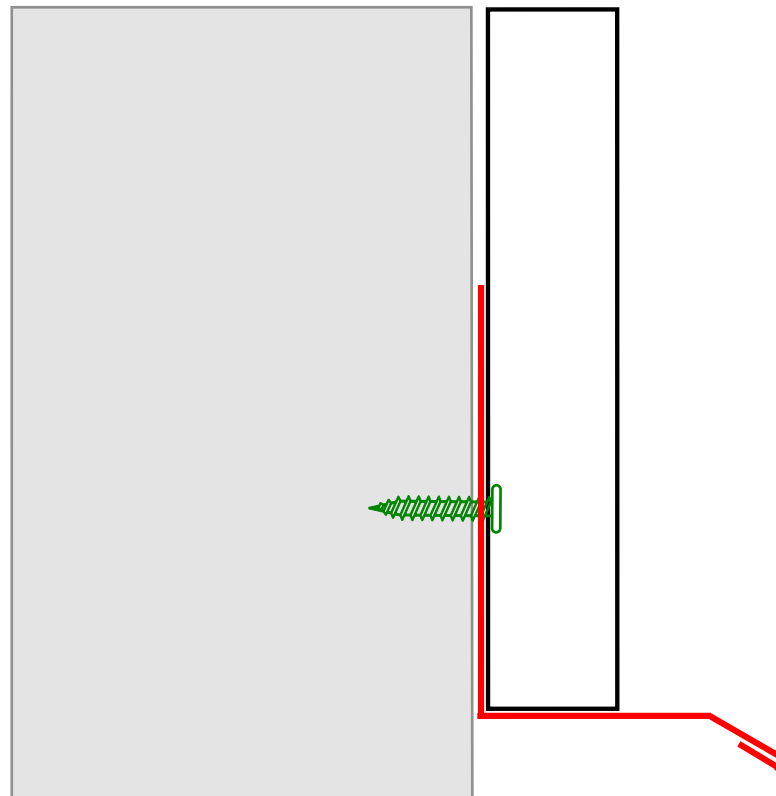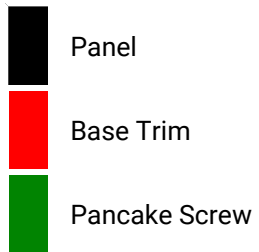

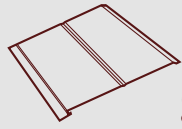

**Ultra®**  
**Steel Soffit**

## Wall | Bottom of Wall - Option 2

- 1) Install Rat Guard using Pancake Screws.
- 2) Install Soffit Panels.

### Color Guide



Panel



Rat Guard



Pancake Screw

